

ClickClack®

**Now that
you've got me...
here's how
to use me.**



Hand Mixer
400w motor

TURBO
BUTTON

VARIABLE
SPEED

ACCESSORY
& CORD
STORAGE

24 MONTH REPLACEMENT GUARANTEE

**For household use only.
Save these instructions.**



FIRSTLY, LET'S STAY SAFE

So I can keep working to your high standards read these safety instructions before using me. They're full of helpful information, so keep them somewhere handy.



Important safeguards

READ ALL INSTRUCTIONS BEFORE USE

Warning: Please ensure all safety instructions are followed carefully. Failure to follow instructions could result in personal injury or property damage.

1. It is extremely important that you read all instructions below carefully before using your new appliance for the first time.
2. Connect only to 220-240V-50-60Hz power outlet.
3. This hand mixer is designed for household use only, don't use outdoors.
4. To remove any choking risk for young children, please remove and safely discard the plastic power plug terminal protector.
5. Never leave the appliance within reach of children without supervision. The use of this appliance by young children must always be supervised.
6. Remove and safely discard any packaging material and promotional labels before using your new handmixer for the first time.
7. Always place mixing bowl (not included) on a solid flat clean surface and holding the mixing bowl at all times is recommended as the bowl may move when handmixer is in operation.
8. Always ensure the hand mixer is correctly and completely assembled before power is turned on and appliance is used.
9. Do not operate the handmixer with wet hands.
10. Ensure the speed control switch (Item 3) is turned to the off position before switching hand mixer on at the power source and power cord is unplugged at the power socket when fitting beater blades and / or dough hooks attachments.
11. Don't use attachments other than those supplied with the hand mixer at time of purchase or provided but the brand owner or their authorised agents.
12. Always ensure attachments are firmly positioned before operating the hand mixer.
13. Do not double the amount of ingredients of any recipes as it may damage your appliance.
14. When using the dough hooks for mixing yeast dough, only fill the mixing bowl to a maximum of 35% of the mixing bowls (not included) maximum capacity
15. Care should be taken when removing ingredients from the mixing bowl (not included).
16. Never cover hand mixer air vents as this may lead to the appliance overheating and becoming damaged.
17. Do not leave the hand mixer unattended when power is on.
18. Do not place any parts of the hand mixer in the dishwasher or microwave oven.
19. Do not use abrasive scouring pads or cleaners when cleaning the beater blades or dough hooks as these may scratch the surface. Avoid soaking in liquids for extended periods as this may damage the metal surfaces.
20. Keep the hand mixer clean.
21. Unplug your appliance as soon as you have finished using it and prior to cleaning it.
22. Don't use your appliance if it has been damaged. You should contact the retailer you purchased the unit from or the brand owner for instructions.

- 23. Never place the appliance power cable or the plug in water or in any other liquid.
- 24. Don't allow the power cable to hang down within reach of children.
- 25. If the power cable or the plug is damaged, don't use your appliance. You should contact the retailer you purchased the unit from or the brand owner for instructions.

26. Never touch the beaters, dough hooks when the appliance is operating. Don't allow long hair or loose items of clothing to hang down over when appliance is in operation.

- 27. Never fit accessories with different functions at the same time. Eg; Dough hooks and beater blades.
- 28. Please note, the blade of blender is sharp, handle the blade with care.
- 29. The power cable must never be close or come into contact with a hot surface or objects with sharp edges eg; gas or electric burner or oven or knives.
- 30. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 31. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- 32. Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.
- 33. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;
- 34. Before using your appliance for the first time, clean the various accessories of your appliance carefully.

My specifications


Model: CHM001W and CHM001BK
Rating: AC 220-240V 50-60Hz 400W
Approval No: SAA-230165-EA

Now it's time to get to know my parts



Beaters and dough hooks

1. Insert the beaters or dough hooks until they are locked into place.
Always insert the accessory equipped with a crown into the opening indicated on the appliance by crown which is similarly toothed.
2. Plug in the appliance.
3. Depending on the quantity to be prepared. Place the ingredients in an appropriate container.
4. Turn the control knob to the right in position '1 - 5' (Fig.2)
6. The appliance is equipped with a turbo button, which allows you instant access to the full power of your appliance (Fig.3)
7. When you have finished using it, reset the control knob to position '0'
8. Unplug the appliance.
9. Eject the beaters or dough hooks by pushing [the eject handle. (Fig 4)
10. During mixing the dough the flour may stay on side of the bowl, please use the spatula to remove.

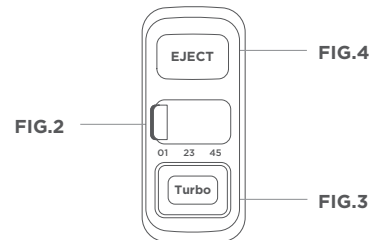

CAUTION

- **Do not operate the hand mixer for periods longer than 3 minutes at a time, allow hand mixer to cool between each use before continuing.**
- **Should you use your hand mixer under extreme load, use for only 1 minute then allow hand mixer to cool before continuing. None of the mixing guide chart examples are considered high load.**
- **Do not double the amount of ingredients of any recipes as it may damage your appliance.**
- **When you take out the dough hook or blades from the housing. Please reset the control knob to position '0'.**



How to clean the appliance

1. Ensure speed control is switched to the off position and the power is switched off at the power outlet, and the power cord is removed from the power outlet.
2. Clean the body of the appliance using only a damp soft cloth.
3. Clean the beaters or dough hooks under running water. Rinse and dry.
4. On completion of using your appliance it is strongly recommended that you clean the accessories immediately. This will remove any clinging food from the accessories. Preventing food drying out of the residue food. Making cleaning easier, and the possibility of bacterial growth.
5. Never immerse the hand mixer, power cord , or plug in water or any other liquid.

Mixing guide

<i>Speed</i>	<i>Description</i>
1	This is a good starting speed for bulk and dry foods such as flour, butter and potatoes.
2	Best speeds to start liquid ingredients for mixing salad dressings.
3	For cake mix and dough.
4	For creaming butter and sugar, beating uncooked candy, desserts, etc.
5	For beating eggs, cooked icings, whipping potatoes, whipping cream. etc.
TURBO	Same as speed '5'

ClickClack® Hand Mixer Warranty

Innova Products Limited guarantees that its ClickClack® Hand Mixer will be free from defect or damage due to faulty or defective materials, workmanship or manufacturing for 24 months from the date of purchase. If your product is unsatisfactory due to faulty or defective materials, workmanship or manufacturing, please call our customer service centre. In order to make a claim under our warranty, you must have original proof of purchase. The product will be replaced free of charge.

HOW TO MAKE A CLAIM? On discovery of defect or damage due to faulty or defective materials within 24 months from the date of purchase, please immediately stop using the product, and call our customer service centre with original proof of purchase and it will be replaced free of charge. If replacement is not possible, a full refund will be provided.

CONDITIONS AND LIMITATIONS: This guarantee does not extend to fair wear and tear in the ordinary course of use. This guarantee does not cover damage caused by commercial use, or other misuse or mishandling, including but not limited to water damage. In the case of any dispute over the cause of damage, please in the first instance contact our customer service Centre on 0800 100 345.

If your product is out-of-warranty but requires repair or service, stop use immediately and contact Customer Service for advice.

Our goods also come with other warranties that cannot be excluded under applicable consumer law. For example, you may be entitled to replacement, refund or repair, depending on the applicable consumer law and the nature of the failure complained of. Some territories do not allow certain exclusions or limitations of warranty, so the above exclusions or limitations may not apply to you. This express manufacturer guarantee gives you specific rights, but you may also have other rights that vary by territory and state.

HOW TO CONTACT US?

Phone: **0800 100 345**. Email: nzinfo@innovaproductsltd.com.

REGISTER WARRANTY ONLINE: It will only take a couple of minutes to register your warranty online and you will have added peace of mind knowing your purchase is recorded and your warranty will be available if called upon.

Go to www.clickclack.com "Register your product" in the homepage footer and follow the prompts.

322 Neilson Street, Onehunga, Auckland, New Zealand.





www.clickclack.com

Innova Products Limited

322 Neilson Street, Onehunga,
Auckland, New Zealand.

Phone: 0800 100 345

Email: nzinfo@innovaproductsltd.com